


DMD
COLLECTIVE

DMD105BLK

Hand Mixer

with Easy Storage Stand

Information for use

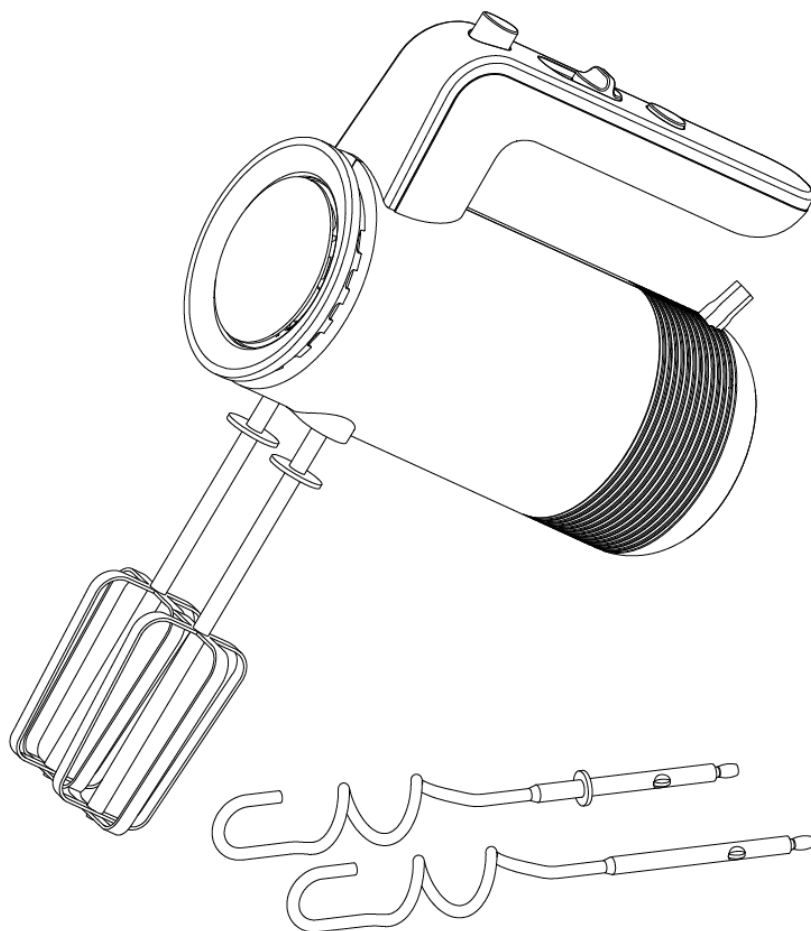

Thank you for purchasing this Hand Mixer with Easy Storage Stand from DMD Collective. Before using this Hand Mixer with Easy Storage Stand please read through all the information in this document and keep it for future reference.

Health and Safety Guidelines



- To protect against risk of electrical shock do not immerse unit in water or other liquid.
- Do NOT let children use this appliance unsupervised.
- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Avoid contacting moving parts. Keep hands, hair, clothing & other utensils, away from beaters, during operation to prevent injury and/or damage to the mixer.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT let the cord hang over edge of table or counter, or touch hot surfaces.
- Remove beaters from mixer before washing.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do NOT carry the unit by the power cord.
- Do NOT leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Do NOT use the beaters to mix hard ingredients such as frozen butter or dough.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Do NOT use the mixer for long time continuously because the motor can overheat. Do not use for longer than 3 minutes.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel. In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.

Cleaning

1. Before cleaning any part of the mixer, move the speed control switch to the off position. Then, unplug the cord from the outlet and eject the beaters.
2. The beaters may be washed in hot, soapy dishwasher.
3. The mixer and the cord can be cleaned with a slightly damp cloth.
4. Do not use chemical products such as benzene, thinner, solvent or abrasive cleaner on any part of the mixer, as it can harm the finish.
5. Be sure to dry all parts thoroughly before you use them again.

Using the Mixer

1. Before handling the beaters, make sure the mixer is unplugged from an electrical outlet and the speed control switch is in the "OFF" position. Insert the beaters by grasping the mixer handle with one hand and the beater stem with the other hand. Insert the beater stem into the opening, rotating slightly (fig.1). Repeat to attach the other beater. (If using the hooks, the hook with washer must be inserted into the left opening).
2. Plug the cord into a standard electrical outlet.
3. Place the ingredients into a bowl, grip the mixer handle, and position the beaters in the center of the food to be mixed
4. Select the speed setting that matches your mixing task.
5. Guide the beaters continuously through the mixing for uniform mixing (fig.2). Whenever you wish to scrape the sides and bottom of the bowl using a hand-held utensil, first move the speed control switch to the "OFF" position. Then place the mixer on the heel rest so that the beaters can drain into the bowl.

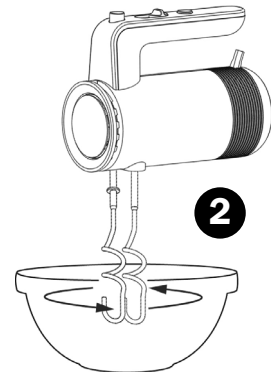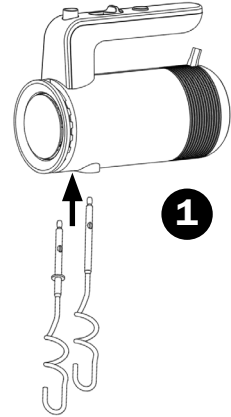

Speed Control

The hand mixer has five different speeds. It is recommended to start at the lowest one and then move up by steps to the one you need.


Setting	Speed	Use
Low	1	To blend in flour, dry ingredients & liquids for batters and cookie dough
Low	2	Thin batters, to prepare sauces, puddings
Medium	3	Cream butter & sugar, beat eggs, batters, cookie dough, cake mixes & frostings
Medium	4	Whole eggs, frozen desserts, light batters
High	5	Whip cream, beat egg whites, mash potatoes & other vegetables
Turbo		Low gear to high speed instantly

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.

Technical Specifications

Product Name:	DMD Collective Hand Mixer with Easy Storage Stand
Supplier Code:	DMD105BLK
Voltage:	AC220~240V
Time or operation:	3 minutes ON, 10 minutes OFF
Interrupter:	6 speeds
Power:	300W
Accessories:	Beaters, hooks, stand



Ace Supply Co (Europe) Ltd.,
Suite GA, Marsland House
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@dmdcollective.co.uk
T: +44 (0)161 447 8597

EU Regd. Address: Ace Supply Co (Europe) Ltd.,
25 Herbert Place, Dublin 2, D02 A098
Republic of Ireland

www.dmdcollective.co.uk