



DMD
COLLECTIVE

DMD117

Hang-n-Dry+ Electric Clothes Dryer

Information for use

Thank you for purchasing this Hang-n-Dry Electric Clothes Dryer from DMD Collective. This electric dryer is designed to dry up to 15kg of washed laundry that has been spun dry. It is suitable for use in homes, student accommodations, caravans, motorhomes, high rise flats, balconies and more.

The dryer consists of three main components. The first is a foldable stainless-steel frame with castor wheels for convenient storage. The 1000-watt mains-operated dryer unit, which is five times cheaper to run than a standard tumble dryer. Then the light-weight 210D Oxford fabric that goes over the frame ensures that heat from the the dryer stays within the enclosed environment.

To get the most out of this product, please read all the information in this document prior to use. Please keep this document for future reference.

Health and Safety Guidelines

When using the clothes dryer, basic safety precautions should always be followed, including the following:

- This appliance is intended for household use only. Do not use the electric dryer in any other way than its intended use.
- Make sure the voltage mark on the electric dryer unit corresponds to the voltage in your home before plugging in the power cord.
- Keep the machine at least 2 metres away from any water or fire source at all times, whether the machine is in use or not.
- Only clean the electric dryer unit with a clean, dry, or damp cloth. Do NOT rinse or pour water over the electric dryer unit.
- The electric dryer allows a preset time of 3 hours. It can be continuously cycled for 2 rounds. That is, no more than 6 hours at a time. After being used for 2 cycles (6 hours), please allow it to cool down for 30 minutes.
- Make sure the power supply socket is earthed and the pins on the plug and sockets are clean.
- When using the dryer, please make sure the clothes have been spun dried in a washing machine or spin dryer. This will reduce excess water dripping onto the electric dryer and the floor and will decrease drying time as well as energy consumption.
- When the electric dryer is operating, please do NOT touch any of the stainless-steel frames or the vent's outlet, as these will get hot.
- This device is NOT intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge, unless they are supervised or have been given instructions concerning the use of the device by a person responsible for their safety.
- This product is not a toy. Children must be supervised at all times when they are near this product and when this product is in operation.
- All washed textiles that are put inside the dryer should be able to endure temperatures of up to 85 °C. Never put flammable materials into the machine.
- The fan's outlet and inlet vents must be kept clean at all times to allow good ventilation. Do not allow any materials or fabric to touch the fan's inlet or outlet.
- Do not attempt to repair the electric dryer unit unless you are a qualified professional. Always seek assistance from a professional.
- We do not recommend using extension cords with this product.



IMPORTANT: This appliance is intended for drying textiles that have been washed in water and spun dry.

 
 
 





 


- **Do NOT touch either the fan outlet or the metal pipes while the clothes dryer is working, as they are hot and you risk getting burned.**
- **After the allotted drying timer has commenced, please allow for 15-20 minutes for the heater unit and stainless-steel pipes to cool down before touching.**

BATTERIES:

- **This product is not supplied with a battery, but once installed please keep away from small children, there is a serious safety hazard if a lithium coin cell is swallowed. If swallowed see a doctor immediately.**

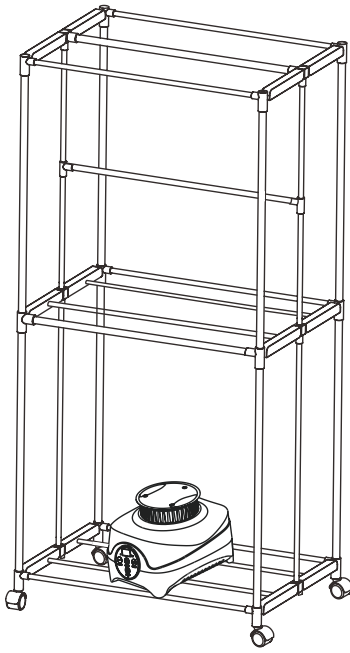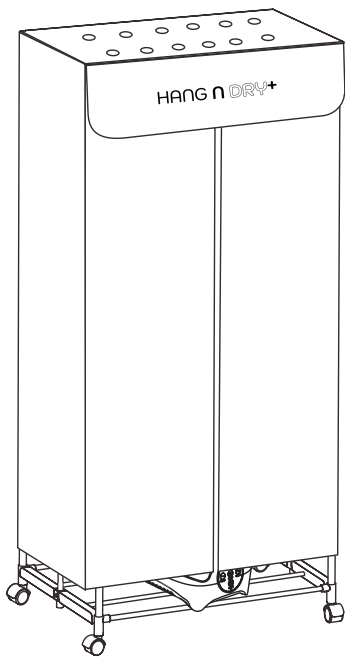Product Elements

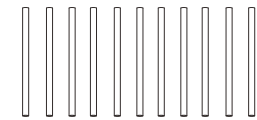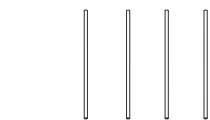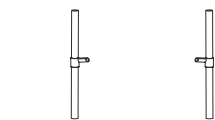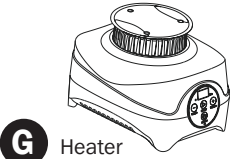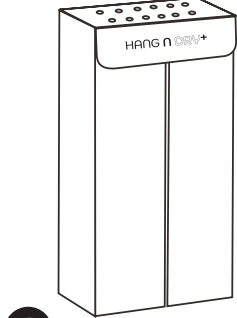

 <p>A Top Module</p>	 <p>B Middle Module</p>	 <p>C Bottom Module</p>
 <p>D Large Poles x11</p>	 <p>E Small Poles x4</p>	 <p>F Poles & Attachment x2</p>
 <p>G Heater</p>	 <p>J Fabric Cover</p>	 <p>K Castor Wheels x4</p>
 <p>H Plastic Hanger</p>		 <p>L Remote Control</p>

Assembly Instructions

1. Prepare the 3 coloured modules on the floor, as seen below (Fig. 1).

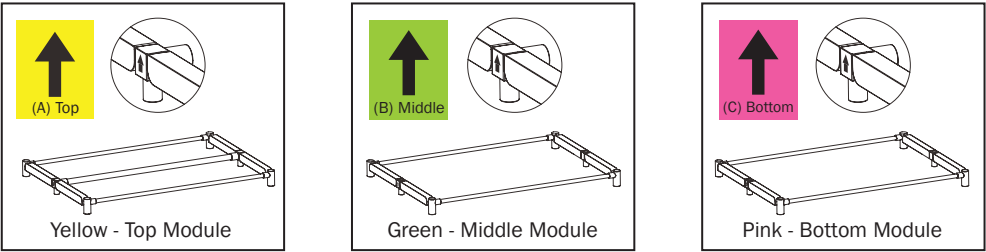


Fig. 1

2. Firstly, using the (C) bottom module, attach the 4 castors wheels to each corner of the module with the arrow facing down.
3. Then place the (B) middle module on the floor with the arrows pointed upwards. Attach 4 (D) large poles in each of the 4 corners and 2 (F) poles with attachments in the middle. Make sure the (F) poles with the fixed plastic are facing upwards (Fig. 2).

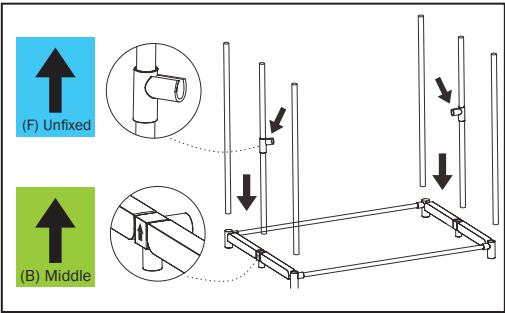


Fig. 2

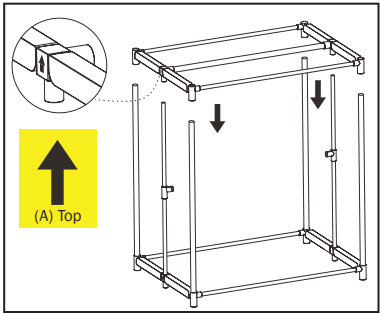


Fig. 3

PLEASE NOTE: When attaching the poles to the module, make sure to push down with force to secure them; otherwise, the product will not be collapsible for storage.

4. Attach the (A) top module to the six poles that you've just attached to the middle module, with the arrows facing upwards (Fig. 3).
5. Once you have secured the top module, turn the frame upside down so that you can see the base of the middle module facing upwards and the arrows pointing down (Fig. 4).

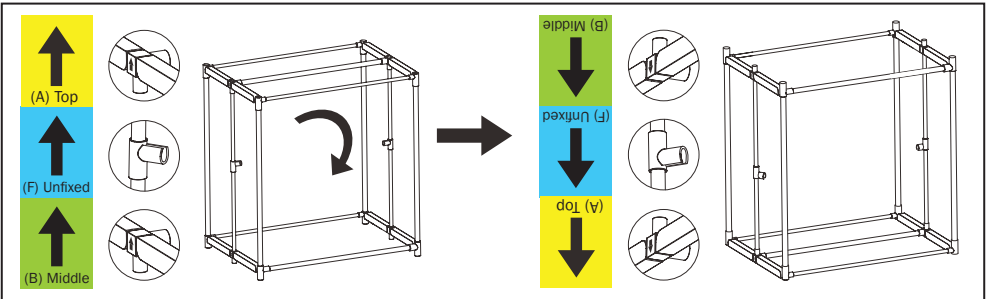


Fig. 4

6. Attach 6 (D) large poles to each hole on the other side of the (B) Middle Module (Fig.5).
7. Thread the fabric onto the frame via the 6 large poles that you have just attached to the (B) Middle Module (Fig. 6).

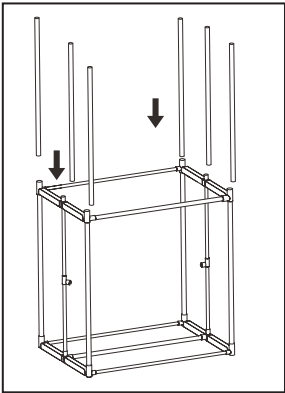


Fig. 5

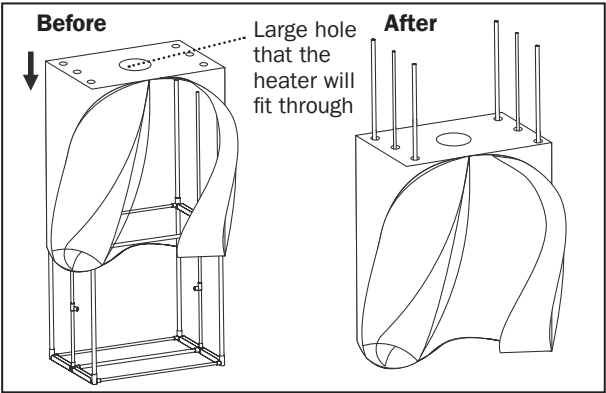


Fig. 6

PLEASE NOTE: These are not to be confused with ventilation holes (Figs. 7 & 8).

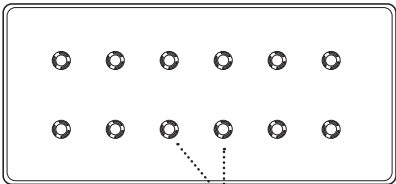


Fig. 7
Ventilation Holes



Fig. 8
Pole Holes

8. Attach the (C) Bottom Module with 4 castor wheels to the 6 large poles with the arrows facing down (Fig. 9).
9. Once you have attached the Bottom Module, turn the frame back upright so that the castor wheels are on the floor (Figs. 10 & 11).

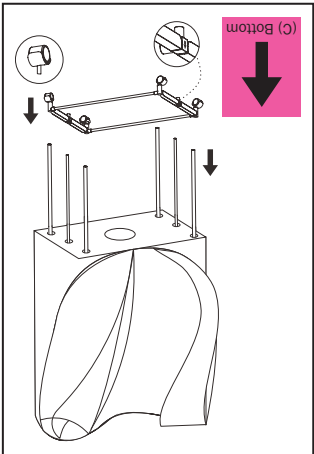


Fig. 9

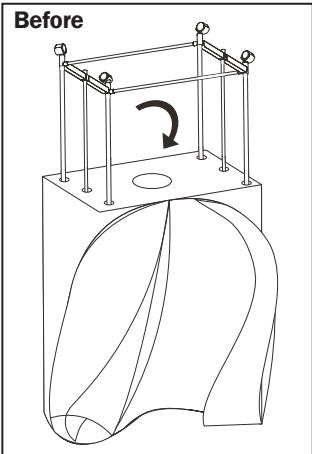


Fig. 10

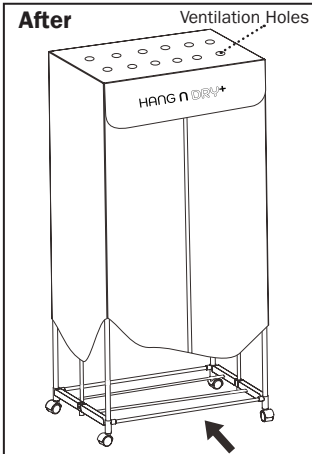


Fig. 11

10. Secure (E) 2 small poles into the inner slots at the bottom of the module, so you can securely place the heater on top of them (Fig. 12).
11. Position the heater in the middle of the bottom module so it fits through the fabric cover. (Fig. 13).

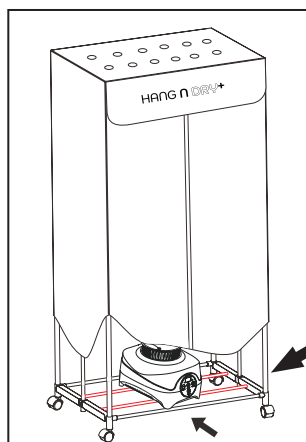


Fig. 12

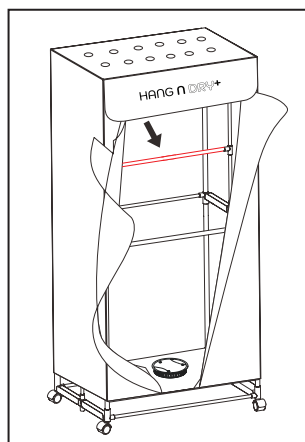


Fig. 13

PLEASE NOTE: The heater's air outlet must pass through the hole at the bottom of the fabric cover. This hole cannot be obstructed or covered by objects during dryer operations.

12. Adjust the fabric to cover the whole frame. Unzip the fabric, then position (D) 1 large pole to the middle layer and press down with force. This pole can be removed to dry long dresses or clothes.
13. Now that you have two small poles remaining, you can customise your drying options (Fig. 14).

Customisable Drying Options:




Fig. 14

Operating Instructions:

- 1. Press the ON/OFF icon to turn the heater on or off. This can cancel or stop the heater at any time during the working process.
- 2. When the heater is turned on, there will be running lines on the LED display screen, meaning that the heater is in standby mode. If there is no operation within 20 seconds, the LED display will turn off, and the heater will power off automatically.
- 3. After powering on, press “Start” to start the heater directly. The preset working time will be 60 minutes and the maximum is 180 minutes.
- 4. During the working process, you can press the “Timer +” or “Timer -” buttons to adjust the working time. Each press will increase the working time or reduce it by 5 minutes.
- 5. The LED display will display the remaining working time of the dryer.

PLEASE NOTE: When using the remote control to operate the functions, please hold the remote control in the direction of the signal received to operate the functions.

The remote control uses 1x Lithium cell CR20253V battery (not supplied).

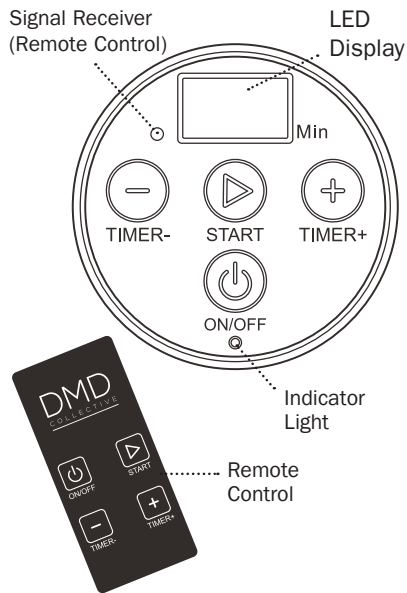

After Use:

To fold the frame after use, please ensure the frame and electric dryer unit have fully cooled down. Once cooled down, please follow the instructions below:

Open up the clothes cover zip and remove the 4 small poles from the middle & bottom layer. Hold and pull up the middle pole and push the frame inward to fold up. (Fig. 15). This is designed to click into place.

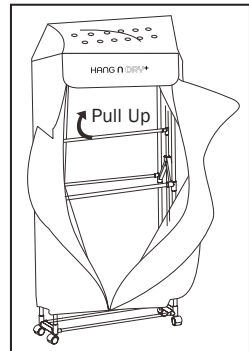


Fig. 15


Troubleshooting

Problem	Potential Reason
Electric dryer unit not working	<ul style="list-style-type: none">1. Please ensure proper connectivity to mains socket.2. Blown fuse.3. Power outage.
Clothes take a long time to dry (more than 180 minutes)	<ul style="list-style-type: none">1. The clothes in the dryer are too thick.2. Clothes have not been spun dry or wrung dried enough.3. The outer fabric cover may not be on properly, leading to hot air escaping.
Electric dryer suddenly stopped working	<ul style="list-style-type: none">1. Fan’s vent outlet or inlet has been blocked by clothing or another object. Please ensure both the outlet and inlet is clear.2. The electric dryer may set to the timer function.
Abnormal noise	<ul style="list-style-type: none">1. Fan’s inlet may be blocked.
Small poles fall out	<ul style="list-style-type: none">1. Ensure that the frame edges are tightly screwed onto the pipes and are properly secured.

Technical Support

If you require any technical support for your product, please contact us on: support@dmdcollective.co.uk and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.



The WEEE symbol  on this product means that this product should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

Important: Additional Safety Information

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.

Technical Specifications

Product Name	DMD Hang-n-Dry+ Electric Clothes Dryer
Supplier Code	DMD117
Sound Decibel Rating	57dB
Temperature Rating	70 °C
Remote Control Battery	1x Lithium cell CR20253V battery (not supplied)
Total Wattage	1000W
Wattage per hour	1kWh
Accept Voltage Frequency	220-240V, 50-60Hz
Max Weight Capacity	15kgs
Item Depth (Front-Back)	76.00cm (29.92in)
Item Height (Base-Top)	149cm (58.66in)
Item Width (Side-Side)	46.5cm (18.31in)



Ace Supply Co Ltd.,
Suite GA, Marsland House
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@dmdcollective.co.uk
T: +44 (0)161 543 6400

EU Regd. Address: Ace Supply Co (Europe) Ltd.,
25 Herbert Place, Dublin 2, D02 A098
Republic of Ireland