
Cordless Steam Iron 2800W

Information for use

Thank you for purchasing this Cordless Steam Iron from DMD Collective. Our Steam Iron has been designed to deliver efficient, powerful ironing performance ensuring that your fabrics are always without creases.

Please read through ALL the information in this document and keep it for future reference.



Health and Safety Guidelines

- Always unplug the appliance when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Check the power cord and plug regularly for any damage. The cord or plug will need to be replaced if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Ensure the iron is unplugged before filling it with water.
- Only use the iron with the provided stand.
- When placing the iron on its heel or stand, ensure the surface is stable.
- Do not use the iron if it has been dropped, shows visible damage, or is leaking.
- Never open the filling aperture while the iron is in use.
- Ensure the power cord does not come into contact with the hot soleplate of the iron.

Steam Iron Features



Temperature Setting

Check the garment's care label for the "iron" symbol, which will have dots indicating the appropriate temperature setting on the thermostat of your appliance.

If the garment does not have care instructions, refer to the following guidelines:

- **Nylon and acetate:** Low temperature
- ● **Wool, silk, or mixed fabrics:** Medium temperature
- ● ● **Cotton and linen (with steam):** High temperature

These settings refer to the main fabric of the garment, not additional elements like embroidery, designs, or decorations.

Fabrics that include embellishments, such as embossed designs and embroidery, should be ironed at a moderate temperature to avoid damage.

If the garment is made of multiple fibres, always choose the temperature suitable for the fibre that requires the lowest heat.

Filling the Water Tank

Before using the iron for the first time, remove all packaging, including the protective cover on the soleplate. Ensure the iron is unplugged, and set the steam switch to the 'off' position. Fill the water tank through the filling hole. For the best results, hold the iron vertically while filling to ensure you add the maximum amount of water.

SUGGESTION: Use distilled, deionised, or demineralised water - especially in areas with hard water.

IMPORTANT: Never use battery topping-up fluid, water containing starch, sugar, fragrant additives, or defrosted water from a refrigerator.

Charging the Base (Cordless Use)

Plug in the charging base and switch it on at the mains. The charging base power light will turn on. Rest the iron on its heel on the charging base, ensuring the heel connector aligns with the charging base connector. When connected, the power indicator light on the handle will illuminate. Wait until the iron reaches the desired temperature before starting to iron.


WHEN IRONING, ENSURE YOU PLACE THE IRON BACK ON THE CHARGING BASE EVERY FEW SECONDS TO MAINTAIN THE HEAT.

NOTE: Steam ironing is advised while using the iron in corded mode.

Temperature Selection

Set the temperature dial to the desired temperature. The temperature indicator light will remain on until the iron reaches the set temperature, at which point it will turn off.

SUGGESTION: The power light will stay on while the charging base is plugged in and powered on, and to save time and energy, start with cooler fabrics and gradually increase the heat, as the iron heats up faster than it cools down.

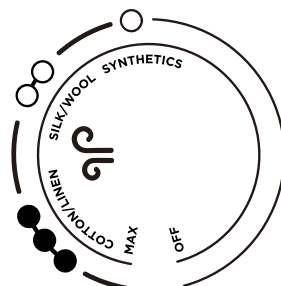

Temperature Dial

Switching On The Steam

Set the temperature dial to the appropriate setting. The temperature indicator light will turn on until the iron reaches the set temperature and then turn off.

NOTE: The power light will stay illuminated when the charging base is plugged in and turned on.

SUGGESTION: Begin with lower-temperature fabrics and gradually increase to higher settings as the iron heats up.

Using The Water Spray

For tough creases, press the water spray button. If you're using it for the first time, you might need to press it a few times to allow the water to flow through.

Steam Boost

Stubborn creases or heavier fabrics may require extra steam. Press the steam boost button to administer extra steam.

NOTE: To ensure the best steam quality, avoid using the steam boost button more than three times in a row.

Dry Ironing

Your iron can be used for dry ironing. Set the steam switch to 'off' and adjust the temperature dial to the desired setting. You do not need water in the tank unless you're using the water spray or steam boost features.

Vertical Steaming

Vertical steam is ideal for removing creases from hanging clothes, curtains, and other items. Hold the iron about 1-2 cm away from the fabric and press the steam boost button to release the steam.

Using Your Iron in Corded Mode


1. Slide the lock on the charging base to the 'lock' position.
2. Place the iron on the charging base, ensuring the handle and cord guard are aligned.
3. Adjust the position of the iron (left or right) until you hear a click sound. The iron is now locked into position on the base.
4. Use the iron as usual. The continuous steam and steam boost functions are recommended in this mode.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

Warning: This product is not intended for use by children or individuals with reduced physical, sensory, or mental capabilities unless supervised by a responsible adult. Small parts may present a choking hazard. Always keep out of reach of children.

Technical Specifications

Product Name:	DMD Cordless Steam Iron 2800W
Supplier Code:	DMD150
Voltage:	220-240V~50-60Hz
Wattage:	2800W



Ace Supply Co Ltd.,
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@dmdcollective.co.uk

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI