

---

## Full HD 1080P Portable Projector

---

### Information for use

Enjoy theatre-quality visuals with this home projector, offering native 1920x1080P resolution and support for 4K content. Whether you're binge-watching shows or gaming, this portable projector delivers crisp, detailed images for an immersive viewing experience.

 
Please read through ALL the information in this document and keep it for future reference.

 


## Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Check the power cord and plug regularly for any damage. The cord or plug will need to be replaced if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Please use the original power adapter.
- When the projector is operational, do not look directly into the lens; this could damage your eyes
- Do not cover the projector's vents. Overheating could damage the appliance
- Regularly clean the projector's vents to prevent dust build up.
- Do not allow grease, dust, moisture, smoke, oils or chemicals to come into contact with the projector.

**Product Components**

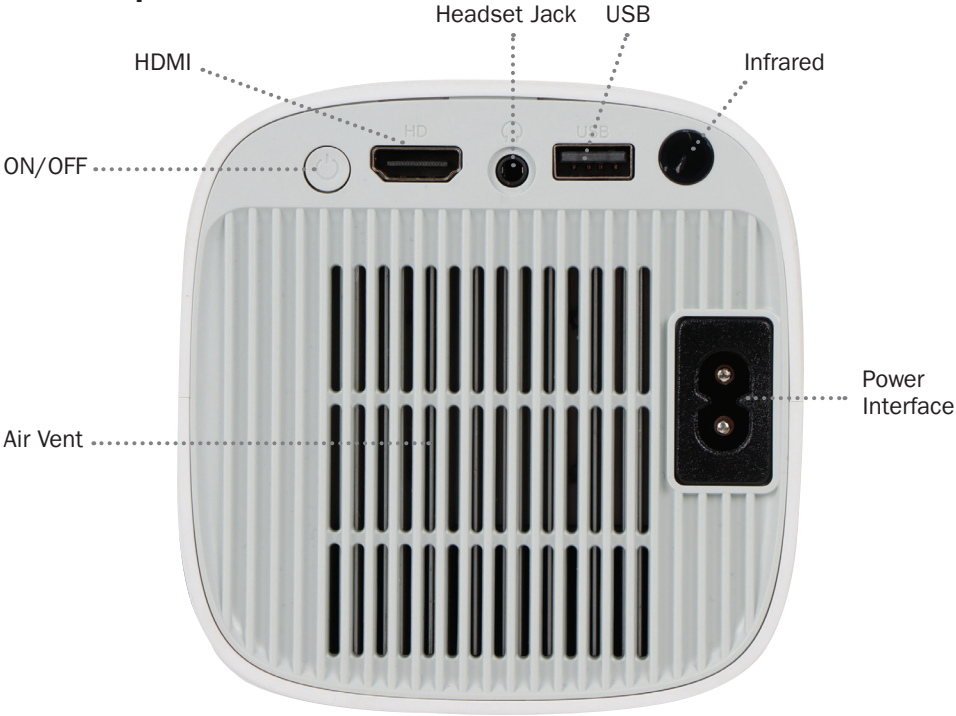

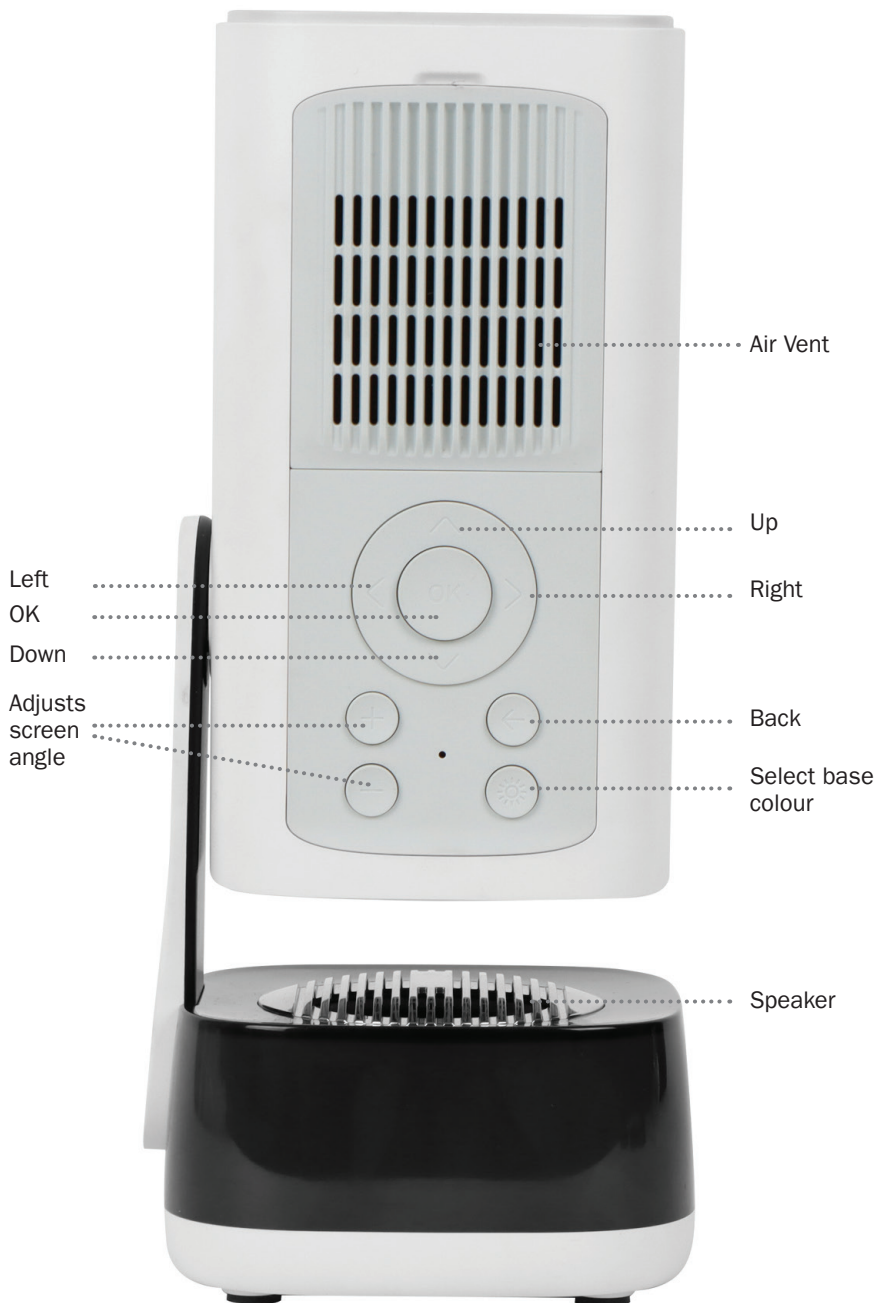

Remote Control Functions



DMD  
COLLECTIVE

**PLEASE NOTE:**  
The remote control  
uses 2 x AAA batteries  
(not included).

## Power ON/OFF

**Power On:** Press the projector's power button for three seconds.


**Power Off:** When turned on, press and hold the power button on the projector or remote.

When you first start projector follow the instructions displayed to do the initial set up, use the left & right keys on the top of the projector.

## Auto Keystone Correction

After the initial set up the projector detects any distortion of the image and then electronically adjusts the image shape so that it appears rectangular on the screen. Improving viewing experience and image quality. To adjust the angle further you can also use the right & left buttons on top of the projector.

 
Fig. 1

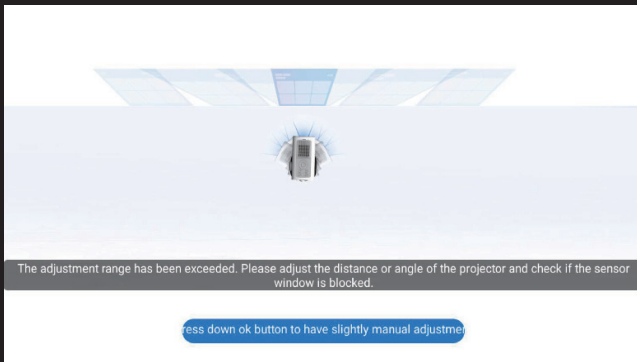

## Manual Adjustment

During the set up if this pop up appears & you want to manually adjust press 'OK' on the projector then you will be taken to the corner adjustment screen (Fig 2).

 Fig. 2.

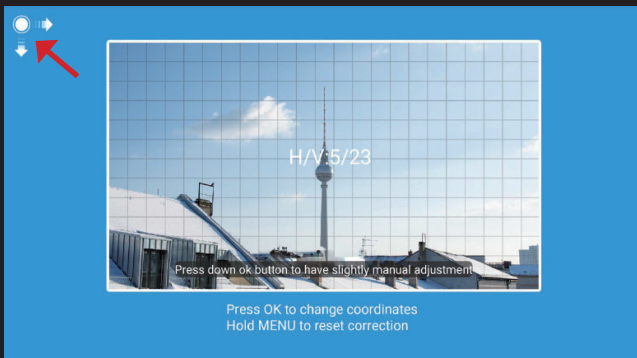


## Corner Adjustment

Adjust each corner using the directional buttons on the remote or projector & press 'OK' to confirm & switch to next corner. Hold the menu button to reset.

## Remote Control Bluetooth Pairing

1. Hold down the left and right keys on the remote control. Indicator lights will flash, and the Bluetooth interface will activate (Fig 3).
2. Once successfully paired you will be taken to settings > Remote & Accessories menu, select “JVIN” and connect.

 Fig. 3

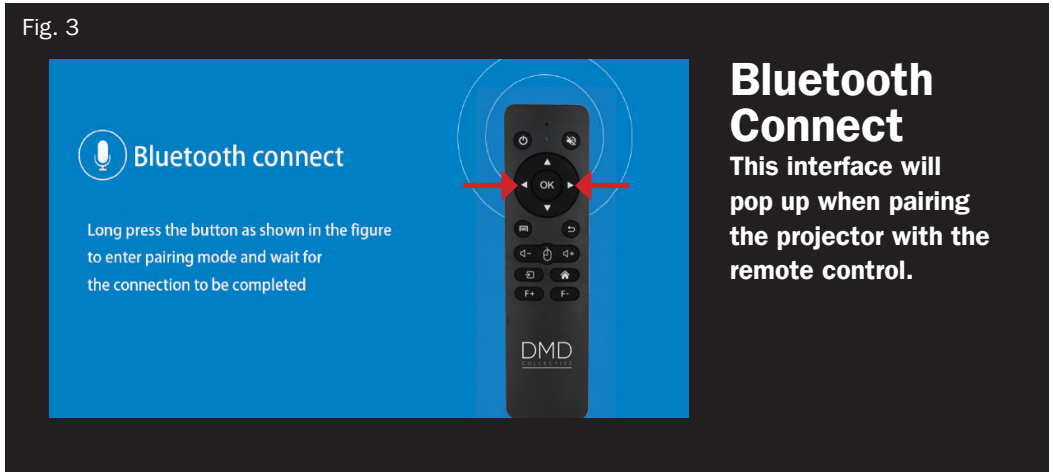


## Focus Adjustment

When the projector is turned on & the image appears blurry, use the remote control's focus buttons to adjust the lens position.



 
Fig. 4

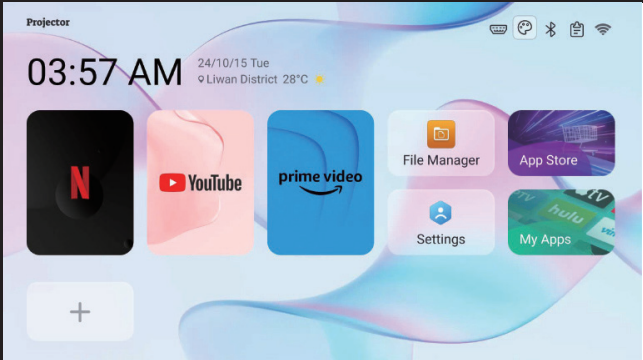

# Home Screen

From the home screen you can access a variety of functions & access the device settings. Choose your preferred main background in the top right corner of the interface.

 
Fig.5

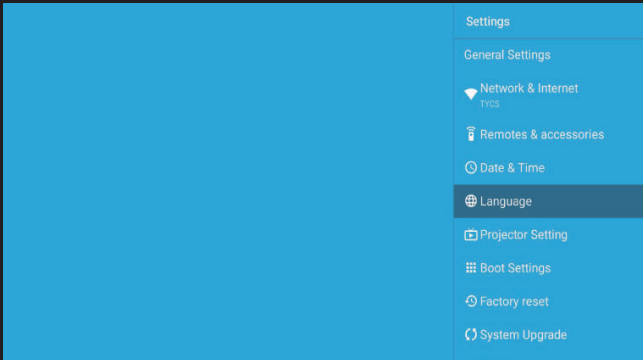

# Settings

From here you can connect to your WiFi connection & bluetooth devices, change the date & time & language (Fig.6).

 Fig. 6

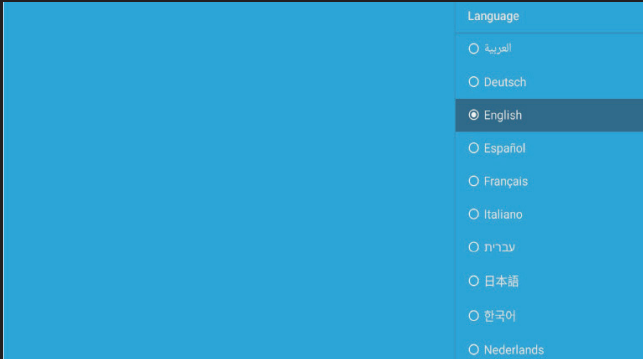


# Language

From the here you can switch the device to your preferred language. To return to the settings screen press the “Back” button on your remote control or the “Home” button to return to the home screen.



 Fig. 7

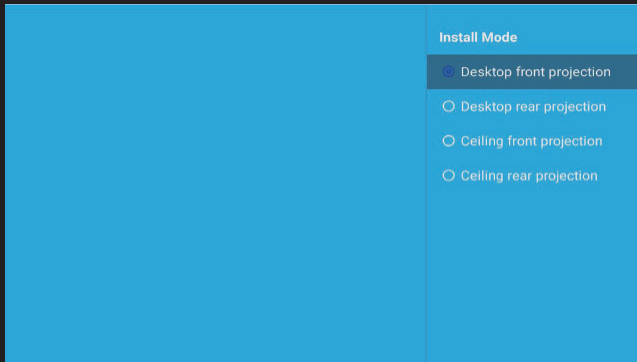

## Projector Mode


Select mode according to your needs.

Four modes available:

- Front table
- Front ceiling
- Back table
- Back ceiling

Auto focus and trapezoidal function can be manually turned on or off.

 
Fig. 8

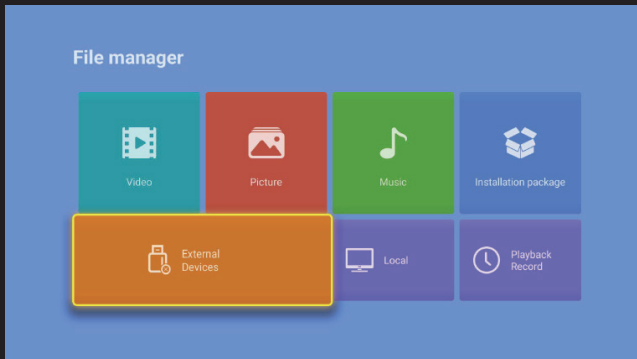

## File Manager

Insert a USB flash drive (not supplied), click the File Manager icon on the homepage & External Devices to access local video, music, photo, and books.

 
Fig. 9

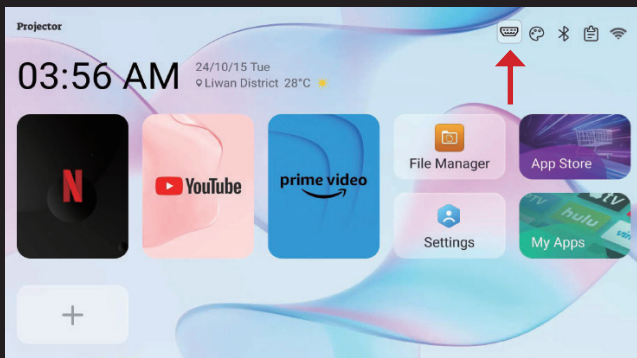

## HDMI Signal


Connect the projector and external sourcing device via a HDMI cable (not supplied). Select HDMI on the homepage, and the signal from the source device will be transmitted to the projector and cast.

 Fig. 10

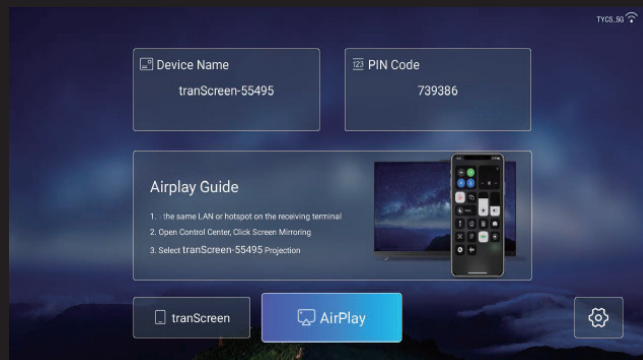

**Phone Screen Mirroring iOS**  
Connect your phone to the same WiFi network as the projector. Open the Control Centre on your phone & click screen mirroring. Select the name of the device.

 Fig. 11

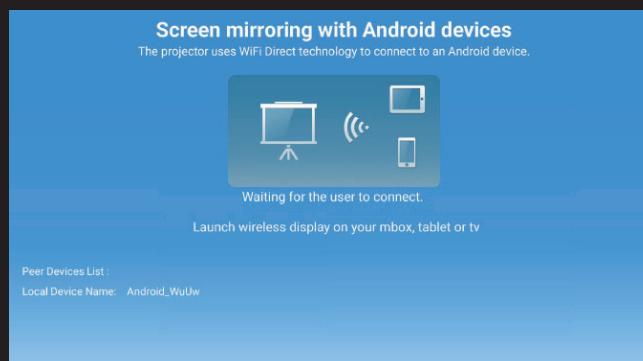

**Android Screen Projection**  
Select 'My Apps' from the Home Screen & then 'Miracast'. Connect your phone to the same WiFi network as the projector. Open the 'Screen Mirroring' or 'Cast' interface on your phone and select "Android". Select the name of the device.

**PLEASE NOTE:** Images are for illustration purposes & may vary from those shown. Refer to the actual display and follow the prompts.

## Control The Projector Using Your Phone


You can use your mobile phone to control certain functions of the projector. To use this function select 'My Apps' from the homescreen. Select 'TransScreen'. Scan the QR code to download the TransScreen App & follow the instructions in the app.

# Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

## WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

## IMPORTANT: ADDITIONAL SAFETY INFORMATION

**Warning:** This product is not intended for use by children or individuals with reduced physical, sensory, or mental capabilities unless supervised by a responsible adult. Small parts may present a choking hazard. Always keep out of reach of children.

## Technical Specifications

Product Name:	DMD Full HD 1080P Portable Projector
Supplier Code:	DMD159
Voltage:	220-240V~50-60Hz
Output Wattage:	70W
Peak Wattage:	90W
Display Resolution Max:	1920 x 1080P
Connectivity Technology:	Miracast
White Brightness:	8500 - 9000 Lumens
Image Brightness:	215-225 ANSI Lumens
Display Type:	LCD
Aspect Ratio:	Default 16:9 (4:3/16:9 aspect ratio optional)
Remote Batteries:	2 x AAA (not included)
Form Factor:	290mm x 127mm x 121mm



IPX5

Ace Supply Co Ltd.,  
Suite GA, Marsland House,  
Marsland Road, Sale M33 3AQ

For Product Support:  
support@dmdcollective.co.uk

EU Regd. Address:  
Ace Supply Co (Europe) Ltd.,  
Dublin 2, D02 A098, ROI