


---

## 72" Manual Projector Screen

---

### Information for use

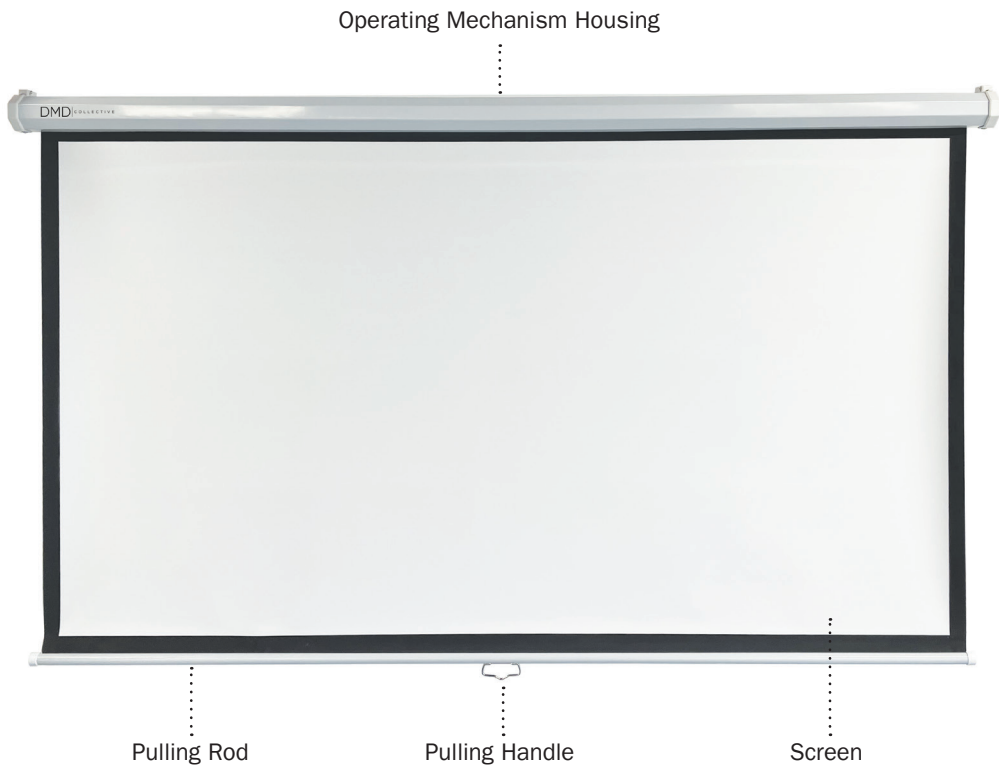

Thank you for purchasing the Manual Projector Screen from DMD Collective. The 72" Manual Projector Screen is designed to give you a clean, professional projection surface without complicated setup. Its smooth white screen reflects light evenly, producing a bright and colour accurate image that enhances movies, presentations, and home cinema viewing.

## Installing

- Ensure the mounting surface is structurally sound and capable of supporting the screen's weight.
- Moving parts of the operating mechanism must be installed higher than **2.5mm** above the floor or any level that could provide access to them.
- Choose a suitable place for installation. It is recommended to install **two screws** on the wall.
- The distance between the screws must be equal to that of the two rings, and they should be at the same level to prevent uneven loading or jamming.
- The rings must be strong enough to support **more than 25kg** weight.
- Do not install near heat sources, vents, or areas of high humidity.

## Useful Instructions

- Hold the pulling handle tightly and pull down the screen slowly. Stop when the black border comes out, or stop at the desired position.
- The screen can auto-fix. If it does not fix automatically, operate it once again using the same method.
- After use, release the screen, and it will go up and return to the housing.

## Warnings

- The screen cannot be folded. Do not use fingers or hard objects to touch the screen surface. Do not splash liquids, or other chemicals onto the screen surface. Keep the screen away from high-temperature objects or fire.
- When pulling the screen down, do so slowly and vertically. Do not pull roughly. Stop pulling as soon as the black border is out, or if the screen is jammed or damaged. In such cases, send the screen to a maintenance center.
- Ensure hands, hair, clothing, and loose items are kept clear of moving parts.

## Care & Maintenance

- After use, return the screen to the housing to avoid contamination. If not using the screen for a long time, remove it from the wall and pack it in a carton.
- If the screen is dirty, clean it gently with a cloth or cotton ball. **DO NOT** use organic solvents to clean the screen surface.
- Ensure the screen is fully extended and stable before cleaning.

## Retracting the Screen Back to the Housing

1. After using the screen, **release the pulling handle** slowly.
2. The screen will automatically **roll back up** into the housing.
3. Ensure the screen retracts fully and smoothly.
4. If the screen does not retract properly, pull it down again slowly and release, then let it return to the housing.
5. Always retract the screen to the housing after use to prevent dust, dirt, or damage.
6. Tip: Do not pull or force the screen while it is retracting. Let it return naturally to avoid damaging the screen or housing.

## Troubleshooting

Problem	Solution
Screen does not stay in position	Pull down the screen slowly again; ensure auto-fix engages.
Screen is difficult to pull	Pull slowly and vertically; stop immediately if jammed.
Screen surface is dirty	Clean gently with a cotton ball; do not use organic solvents.
Screen returns too quickly	Check that you are holding the pulling handle firmly and pulling smoothly.

## Technical Specifications

<b>Product Name:</b>	72" Manual Projector Screen
<b>Supplier Code:</b>	DMD164
<b>Material:</b>	Hardware, plastic, mesh screen
<b>Dimensions:</b>	H900 x W1600mm
<b>Colour:</b>	White
<b>Aspect Ratio:</b>	16:9

**Ace Supply Co Ltd.,**  
Suite GA, Marsland House,  
Marsland Road, Sale M33 3AQ

**For Product Support:**  
[support@dmdcollective.co.uk](mailto:support@dmdcollective.co.uk)

**EU Regd. Address:**  
Ace Supply Co (Europe) Ltd.,  
Dublin 2, D02 A098, ROI

[www.dmdcollective.co.uk](http://www.dmdcollective.co.uk)