

9 Fin Oil Filled Radiator with LED Display

Information for use

Thank you for purchasing this 9 Fin Oil Filled Radiator with LED Display. This product is designed to provide indoor heating with adjustable temperature, timer and mode settings for convenient everyday use.

Before using this appliance, please read these instructions carefully and keep them for future reference.



Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Check the power cord and adapter regularly for any damage. The cord or adapter will need to be replaced if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the assembly, adapter, or cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the adapter from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Do not cover the heater with clothes, towels or any materials, as this may cause overheating.
- Use extreme caution when the heater is used near children, elderly persons or individuals with limited mobility.
- Do not place the heater directly below a socket-outlet to prevent heat damage.
- Do not run the power cord under carpets or rugs, as this may cause overheating. Keep it away from walkways to prevent tripping.

- Do not use external control devices such as third-party timers or smart plugs with this heater. Use the heater in a well-ventilated area and ensure that air openings are not blocked.
- The heating element may be damaged if the heater is dropped or hit. Check that the element is not damaged prior to each use. Do not use the heater if the element is broken.
- Keep at least 1 metre away from flammable materials such as curtains, furniture and bedding.
- Do not use the heater in areas where petrol, paint or other flammable liquids are stored.
- Do not use the heater in the immediate surroundings of a bath, shower or swimming pool.
- The heater becomes hot during use. Avoid direct contact with surfaces to prevent burns.
- Ensure no other high-power appliances are connected to the same circuit to avoid overload.
- This heater contains a precise quantity of special oil. Repairs involving the oil container must only be carried out by qualified personnel.
- Do not use the heater in rooms smaller than 5m² to prevent overheating.
- Always use the heater on a flat, stable and dry surface.
- Ensure castor wheels are correctly fitted before use.
- Allow the heater to cool before moving or storing.

Product Components



Assembly Instructions

WARNING: Do not operate the heater without the feet (castor wheel assemblies) securely attached. Only operate the heater in an upright position, with the feet on the bottom and the controls on the top. Operating in any other position could create a hazardous situation.

BEFORE YOU BEGIN: Place the radiator body upside down on a flat, stable and scratch-free surface. Ensure the unit is secure and will not fall during assembly.

1. Unpack the castor wheels and arc-shaped brackets from the heater packaging (these may be packed separately or within the box).
2. Turn the radiator upside-down on a flat, stable and soft surface to prevent damage to the unit or flooring.
3. Attach the castor wheels by positioning the U-bolt brackets between the outermost fins on each side of the radiator (Fig. 1).

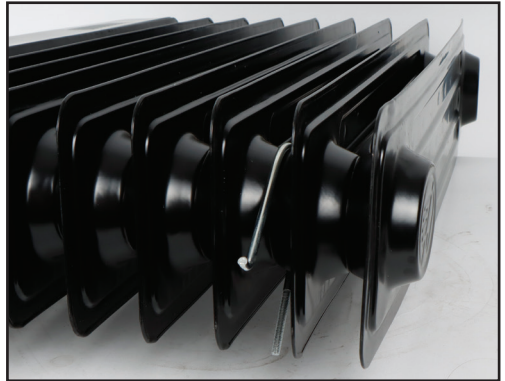


Fig. 1

4. Align the threaded ends of the U-bolt with the holes in the castor mounting plate and insert them through the plate (Fig. 2).



Fig. 2

5. Secure each castor wheel by tightening the wing nuts onto the bracket until firmly fixed (Fig. 3).


Note: Do not overtighten, as this may cause damage to the radiator flange.

6. Ensure all parts are securely fastened and the heater is stable before returning it to an upright position.
7. Carefully return the heater to its upright position before use.



Fig. 3

Control Panel

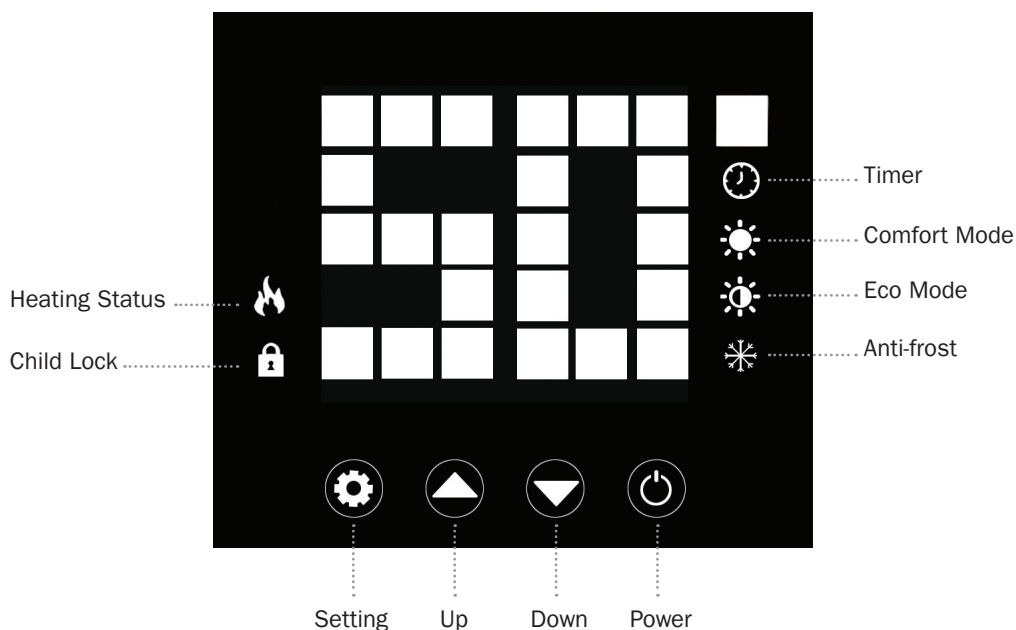

Power On/Off (Power Switch)

1. Press the **Power button** to turn the heater on.

When switched on the **Heating Status icon** appears on the display. The **Eco Mode icon** illuminates by default. This indicates the heater is operating in **Eco Mode**.

2. Press the **Power button** again to turn the heater off.

Selecting Heating Modes

1. Use the **Up** and **Down** buttons to cycle through the heating modes:
 - Eco mode
 - Comfort mode
 - Anti-frost mode
2. As you press the buttons, the selected mode icon will flash on the display. After a few seconds, the icon will stop flashing. When the icon stops flashing, the heater will begin operating in the selected mode.

Adjusting Temperature

1. To adjust the set temperature of any mode press the **Setting button**.
2. The temperature digits will begin to flash, indicating adjustment mode is active.
3. Use the **Up and Down buttons** to increase or decrease the temperature. Temperature range: 15°C to 50°C
4. While setting the digits will flash.
5. Once set the digits will stop flashing. The heater will operate at the selected temperature.

Setting the Timer

1. Press the **Setting button** until the timer setting is selected.
2. The timer digits will begin to flash on the display.
3. Use the **Up and Down buttons** to adjust the time and select your preferred time. The timer range is 1–24 hours.
4. While setting the digits will flash.
5. After setting the display will return to heating mode.
6. The heater will continue to operate until the selected time has elapsed.

Child Lock Function

1. To activate the child lock press and hold the **Up button**.

When activated the **Child Lock icon** will appear on the display, the control panel buttons will be locked.

2. To deactivate the child lock press and hold the **Down button**.

When deactivated the **Child Lock icon** will disappear, all buttons will become usable again.

Display Light Control

1. To switch off the display light while the heater is operating press and hold the **Setting button** for 5 seconds.

When switched off the display light will turn off while the heater continues operating.

2. To switch the display light back on press and hold the **Setting button** again.

Heating Modes

Eco Mode

- In Eco mode, the heater operates at reduced power output. This helps maintain a comfortable temperature while using less heating output compared to full power operation.
- For example: If the heater's full capacity is **2000W**, in Eco mode it will operate at approximately **800W**.

Comfort Mode

- In Comfort mode, the heater operates at full power output. This allows the heater to deliver maximum heating performance when higher heat is required.
- For example. If the heater is rated at **2000W**, it will operate at **2000W** in Comfort mode.

Anti-frost Mode

Anti-frost mode is designed to help prevent the temperature from dropping too low.

- When the ambient temperature falls below 5°C, the heater will begin operating.
- When the temperature rises above 7°C, the heater will automatically stop heating.

Remote Control

The remote control allows you to operate the heater from a distance of up to 2 metres. It provides the same functions as the control panel, allowing you to control power, modes, temperature, timer and settings. The remote control takes 1x 3V CR2025 battery (not supplied).



Child Lock Function (Remote Control)

1. To activate the child lock with the remote control, press and hold the **Child Lock button**.

When activated the **Child Lock icon** will appear on the display, the control panel on the heater will be locked. **The remote control will still operate the heater.**

2. To deactivate the child lock press and hold the **Child Lock button**.

When deactivated the **Child Lock icon** will disappear, all buttons will become usable again.

Display Light (Remote Control)

1. To switch off the display light while the heater is operating press and hold the **Display Light button** for 5 seconds.

When switched off the display light will turn off while the heater continues operating.

2. To switch the display light back on press and hold the **Display Light button** again.

Cleaning & Maintenance

- Unplug the heater and allow it to cool completely before cleaning.
- Wipe the radiator with a soft, slightly damp (not wet) cloth.
- Do not use excessive water when cleaning.

- WARNING:** Never immerse the heater in water. Do not use detergents, solvents or abrasive cleaners. Do not allow water to enter the heater through any openings.
- Clean the heater regularly to prevent dust build-up
 - Ensure the heater has fully cooled before storing.
 - Store the heater in a clean, dry indoor location.
 - Do not store in damp or humid environments.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

Warning: This product is not intended for use by children or individuals with reduced physical, sensory, or mental capabilities unless supervised by a responsible adult. Small parts may present a choking hazard. Always keep out of reach of children.

Technical Specifications

Product Name:	DMD 9 Fin Oil Filled Radiator with LED Display
Supplier Code:	DMD188
Voltage:	220-240V~50/60Hz
Wattage:	2000W
Cable Length:	1.5m
Max Temp Setting:	50°C
Min Temp Setting:	15°C
Max Time:	24hrs
Remote Control Battery:	1x 3V CR2025 (not supplied)



Ace Supply Co Ltd.,
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:
support@dmdcollective.co.uk

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI