

DMD
COLLECTIVE

DMD190

Space Heater

Information for use

This space heater is designed for efficient and portable indoor heating. Featuring a ceramic heating element, adjustable thermostat, and oscillation function, it provides fast and reliable warmth for everyday use.

With multiple heat settings, a timer function, and a clear LED display, the heater allows you to easily control your comfort. Its compact design makes it ideal for bedrooms, home offices, and small living spaces.

This product is suitable for well-insulated spaces or occasional use only.

Before using this product, please read all instructions carefully and keep this manual for future reference.



Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Check the power cord and adapter regularly for any damage. The cord or adapter will need to be replaced if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the assembly, adapter, or cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the adapter from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Do not cover the heater with clothes, towels or any materials, as this may cause overheating.
- Use extreme caution when the heater is used near children, elderly persons or individuals with limited mobility.
- Do not place the heater directly below a socket-outlet to prevent heat damage.
- Do not run the power cord under carpets or rugs, as this may cause overheating. Keep it away from walkways to prevent tripping.

- Do not use external control devices such as third-party timers or smart plugs with this heater. Use the heater in a well-ventilated area and ensure that air openings are not blocked.
- Keep combustible materials such as furniture, bedding, paper, clothing, and curtains at least 0.9 metres (3 feet) away from all sides of the heater
- Do not use the heater in areas where petrol, paint or other flammable liquids are stored.
- Do not use the heater in the immediate surroundings of a bath, shower or swimming pool.
- The heater becomes hot during use. Avoid direct contact with surfaces to prevent burns.
- Ensure no other high-power appliances are connected to the same circuit to avoid overload.
- Always use the heater on a flat, stable and dry surface.
- Allow the heater to cool before moving or storing.
- Do not insert or allow objects to enter the air inlet or outlet, as this may cause electric shock, fire, or damage to the heater.
- Do not use the heater on soft surfaces such as beds or sofas, where airflow may become blocked
- Do not use the heater to dry clothing, shoes, or any other items.

Product Components



Control Panel



Operation

1. Power ON/OFF

Plug the heater into a standard 220–240V AC electrical outlet.

Press the **Power ON/OFF** button to switch on the heater. The heater will operate at 1200W, and the red indicator lights will illuminate.

2. Select Heating Mode

Press the **MODE** button to cycle through the following modes:

- Regular Fan – Cool air (three blue indicator lights)
- Warm Fan – Half power heating (one red indicator light)
- Hot Fan – Full power heating (three red indicator lights)

The corresponding indicator lights will show the selected mode.

3. Oscillation Function

Press the **TURN** button to activate oscillation.

The heater will rotate automatically at approximately 70° to distribute heat evenly.

Press the button again to stop oscillation.

4. Adjust Temperature

Press the “+” or “-” buttons to increase or decrease the temperature setting.

5. Timer Function

Press and hold the **MODE** button for approximately 3 seconds to enter timer setting mode.

- The display will show the timer setting
- Use the “+” and “-” buttons to set the desired time (up to 9 hours)
- The display will flash to confirm the setting

The heater will automatically switch off when the timer ends.

Safety Functions (Automatic Operation)

- **Tip-over protection** – The heater will automatically switch off after 30 seconds if it is knocked over.
- **Overheat protection** – The heater will stop heating if it becomes too hot and will resume operation once it has cooled down.

Cleaning & Maintenance

- Always switch off the heater and unplug it from the electrical outlet before cleaning.
- Allow the heater to cool completely before handling.
- Do not immerse the heater in water or allow water to enter the unit, as this may cause electric shock.
- Clean the exterior with a soft, dry or slightly damp cloth.
- Keep the air inlet and outlet clean and free from dust and debris to maintain proper airflow.
- Ensure the heater is switched off and unplugged before storing.
- Allow the heater to cool completely.
- Store the heater in a clean, dry place.
- Wrap the power cord neatly. Do not allow it to come into contact with sharp edges or be compressed by heavy objects.
- Ensure the power cord is stored safely and away from metal objects.
- Always check the plug before use to ensure no foreign objects are attached.
- Do not place heavy items on top of the heater during storage, as this may cause damage.

Troubleshooting

Issue	Possible Cause	Solution
Heater does not turn on	• Not plugged in or power off • Tip-over protection activated	• Check the plug is securely connected and switch on the power • Place the heater on a flat, stable surface and restart
No heat/blowing cold air	• Heater is in Regular Fan mode • Temperature setting too low	• Press MODE and select Warm Fan or Hot Fan • Increase temperature using “+” button
Heater turns off	• Overheat protection activated • Timer has reached end	• Switch off, unplug, and allow the heater to cool before restarting • Reset timer or restart the heater
Oscillation not working	Oscillation not activated	Press the TURN button to enable oscillation
Timer not working as expected	Timer not set correctly	Press and hold MODE for 3 seconds, then set time using “+” and “-”
Indicator lights not as expected	Different mode selected	Check mode settings and corresponding indicator lights

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

Warning: This product is not intended for use by children or individuals with reduced physical, sensory, or mental capabilities unless supervised by a responsible adult. Small parts may present a choking hazard. Always keep out of reach of children.

Technical Specifications

Product Name:	DMD Space Heater
Supplier Code:	DMD190
Voltage:	220-240V~50/60Hz
Wattage:	1200W
Heating Type:	Ceramic Fan Heater
Heating Modes:	Regular Fan/Warm Fan/Hot Fan
Oscillation:	Approx. 50°
Max Time:	9hrs
Control Type:	LED Display with Button Controls



Ace Supply Co Ltd.,
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:
support@dmdcollective.co.uk

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI

www.dmdcollective.co.uk