

9kg Spin Dryer

Information for use

Thank you for purchasing the 9kg Portable Spin Dryer. This appliance is designed to efficiently remove excess water from clothing, towels, bedding, and other washable fabrics after washing, helping to significantly reduce drying time before air drying or ironing.

Please read this user manual carefully before operating the appliance to ensure safe and correct use. Retain this manual for future reference, maintenance guidance, and safety information.

Working Principle

The spin dryer uses high-speed centrifugal spinning to remove excess water from clothing and fabrics. During operation, the inner drum rotates at high speed, forcing water out through the drainage holes and out of the machine through the drain outlet. This process helps reduce drying time by leaving clothes significantly drier after washing.



Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Check the power cord and adapter regularly for any damage. The cord or adapter will need to be replaced if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the assembly, adapter, or cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the adapter from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Always distribute clothing evenly inside the drum to help prevent excessive vibration during operation.
- Do not spin dry clothing containing sharp objects, fragile items, or bulky padded materials, as these may damage the appliance or create a safety hazard.
- Do not open the lid during operation. Wait until the drum has stopped completely before opening the lid after use.
- Keep children away from the appliance while it is operating.
- Always place the appliance on a flat, stable, and dry surface during use.
- Ensure the drain hose remains unobstructed during use and positioned correctly to allow proper water drainage and prevent water backflow.
- If water inside the appliance has frozen in cold conditions, allow the unit to fully thaw before use. Do not attempt to operate the appliance while frozen.
- Do not place hands or objects inside the spinning drum during operation.
- **Warning: Do not use the appliance to spin dry inflatable, foam-filled, oversized, or expandable items.**

Instructions For Use

1. Place the drain hose in a suitable drainage area, then plug the appliance into a suitable mains power outlet and open the lid.
2. Load clothing evenly into the inner drum and gently press items down to ensure balanced distribution. Uneven loading may cause excessive vibration during operation. Close the lid securely before use.
3. Turn the timer control clockwise to select a spin time between 1 and 5 minutes. The drum will begin spinning automatically. Opening the lid during operation will stop the spin cycle for safety. Close the lid to resume operation if required.
4. For optional spray rinsing during the spin cycle, connect the supplied water inlet hose to a tap and insert the other end into the water inlet opening on the appliance. Turn on the water supply gently during spinning if additional rinsing is required.
5. After use, switch off and unplug the appliance. Wipe the exterior with a dry cloth and store the unit in a clean, dry, and well-ventilated indoor area.

Fault	Possible Cause	Troubleshooting Method
Drum does not spin	• Power plug is not fully connected • Timer has not been set • Lid is not fully closed • Lid safety switch is not engaging properly • Loose motor or drum fixing screws • Fabric has become trapped around the drum shaft • Brake mechanism requires adjustment	• Insert the power plug securely into the mains socket • Turn the timer control to start operation • Close the lid securely • Check that the lid is correctly closed. If the issue continues, contact a qualified technician • Contact a qualified technician to inspect and tighten the screws • Switch off and unplug the appliance, then remove the trapped fabric if it is safe to do so • Contact a qualified technician for inspection and adjustment
Excessive vibration during operation	• Laundry load is unevenly distributed • Clothing is trapped between the inner and outer drum • Appliance is placed on an uneven surface • Drain hose is not positioned correctly, causing water build-up	• Stop the appliance and redistribute the clothing evenly inside the drum • Switch off and unplug the appliance, then remove the trapped clothing • Place the appliance on a flat, stable, and solid surface • Position the drain hose correctly to allow water to drain freely
Slow drum rotation	Appliance is overloaded	Reduce the amount of laundry in the drum
Abnormal noise during operation	Inner drum cover is not properly fitted	Fit the inner drum cover correctly before use
Poor water drainage	• Fabric is blocking the drain outlet • Drain hose is positioned too high • Water inside the appliance has frozen	• Switch off and unplug the appliance, then remove any fabric blocking the drain outlet • Lower the drain hose to allow proper water flow • Allow the ice to thaw before use. Do not operate the appliance while frozen
Mechanical noise during operation	Internal rotating components may require lubrication	Contact a qualified technician for inspection and servicing

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

Warning: This product is not intended for use by children or individuals with reduced physical, sensory, or mental capabilities unless supervised by a responsible adult. Small parts may present a choking hazard. Always keep out of reach of children.

Technical Specifications

Product Name:	9kg Spin Dryer
Supplier Code:	DMD197
Voltage:	220-240V~50-60Hz
Cable Length:	1.5M
Rated Power:	120W
Capacity:	9kg
Maximum Spin Time:	5 Minutes
Maximum Noise Level:	≤70dB
Dimensions:	420 × 430 × 760mm



Ace Supply Co Ltd.,
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:
support@dmdcollective.co.uk

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI

www.dmdcollective.co.uk