

**DMD**  
COLLECTIVE

DMDWS1

---

# 2-in-1 Portable Washing Machine & Spin Dryer

---

## Information for use

Thank you for purchasing this 2-in-1 Portable Washing Machine & Spin Dryer from DMD Collective. This product is designed to provide an efficient washing facility for those with limited home space.

Before using this 2-in-1 Portable Washing Machine & Spin Dryer, please read through all the information in this document and keep it for future reference.

# Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do not carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.

## Installation & Operation:

### Step 1 - Washing

1. Place the product on a level surface near a drainage point.
2. Open the top cover, remove the clothes press and the red tags (the red tags can be disposed of) and turn the spin basket clockwise to release and remove.
3. Clip water drainage tube to the right side.
4. Place clothes in the washing machine.
5. Plug the washing machine in.
6. Fill with warm water, via the water inlet (an inlet pipe is provided) or direct into tub with a jug (not exceeding 40°C/woollen fabrics 30°C) to the appropriate level marks, L - 22L, H - 26L.
7. Add washing powder to water.
8. Switch module to wash and set timer as desired.
9. When wash ends, release the drainage tube and drain water into sink or suitable container.

## Step 2 - Rinsing

1. Clip drainage tube to side of the machine.
2. Re-fill tub with clean water to the level marks.
3. Turn the dial to desired time.
4. When the cycle has finished, release the drainage tube and drain water.
5. Repeat above process if necessary.
6. Leave drainage tube in released position.

## Step 3 - Spinning

1. Insert the spin bucket into the washer, turn anti-clockwise and clock into position.
2. Place wet clothes into spin bucket, split load if necessary (do not overload basket, max 2kg).
3. Place the clothes press over the clothes and press down to secure.
4. Switch the module to spin and set timer as desired.

## General Maintenance:

### Step 1 - Washing

- When cleaning the housing of the machine, wipe it thoroughly and wipe out dirt. When unit is very dirty, please use a neutral liquid soap to clean.
- Store in a cool, dry place.

### WARNING! ELECTRICAL ITEM, PROTECT FROM RAIN AND WATER.

1. Water is not to enter the inner part of the machine directly, to protect the electric motor.
2. When removing the plug from the socket, ensure hands are dry.
3. To avoid plastic deformation, do not place heavy goods or hot objects on the unit.
4. Do not use excessive amounts of washing powder, this will affect washing.
5. Water must never exceed 55 degrees.
6. If supply cord is damaged it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid hazard.
7. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Keep the machine away from direct sunlight and heating appliances.
9. If there is an excess amount of water in the tub, it will overflow.
10. Fast colour washings should be washed separately.
11. For washing woollen garments, please use a washing net bag and wash garments inside out.

## Trouble Shooting:

Problem	Check up
No Washing	Power failure?
	Fuse Blown?
	Check if the power cord is connected to the socket properly?
	Switch the timer?
No Draining	Is the drain hose kept down?
	Is the drain hose twisted or the threshold too high?
	Is the drain hose frozen?
No washing power	Is the load too heavy?
	Is the V belt too loose?
	Is the voltage too low?

# Technical Specifications

## Product name

2-in-1 Portable Washing Machine & Spin Dryer

## Supplier code

DMDWS1

## Voltage

220-240V AC 50/60Hz

## Max Water Capacity

26 Litre

## Power Wash/Spin

240W/120W

## Wash/Spin Max Load

4.6kg/2kg


## Gross Weight

7.5kg

## Net Weight

6.5kg

# Wiring Diagram

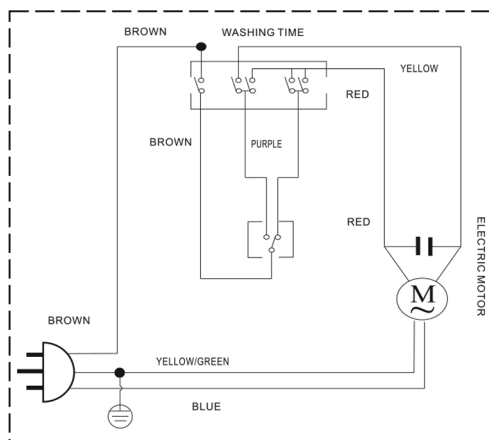

# Technical Support

If you require any technical support for your product within the warranty period, please contact us on [support@dmdcollective.co.uk](mailto:support@dmdcollective.co.uk) and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

## WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

# IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.



**Streetwize;** Suite GA, Marsland House  
Marsland Road, Sale M33 3AQ

## For Product Support:

**E:** [support@dmdcollective.co.uk](mailto:support@dmdcollective.co.uk)

**T:** +44 (0)161 543 6400

**EU Regd. Address:** Ace Supply Co (Europe) Ltd.  
25 Herbert Place, Dublin 2, D02 A098  
Republic of Ireland

[www.streetwize.co.uk](http://www.streetwize.co.uk)