

streetwize

Solar Colour Changing LED Wind Chime

GW296



Thank you for purchasing this Solar Multi-Coloured LED Wind Chime from Gardenwize. The instructions written below provides you with guidance on how to get best use of the product. We highly advise that you read these instructions before using the product.

How It Works

This charming solar colour changing LED wind chime comes with solar panels situated at the top. During the day, these solar panels absorb solar energy to charge the included rechargeable battery. At night, the LED light automatically illuminates and provides a dazzling colour changing LED display.

Where to Put Solar Light

As this is a wind chime, this product is designed to be hung. When doing so, the solar panels **MUST** be under **DIRECT SUNLIGHT** in order for the battery to charge.

We highly advise to avoid positioning the solar panel where there is a lot of shade or there is low light as this will prevent the battery from getting charged. And we also advise to not position the light near sources of artificial light that come on at night such as street lights as this will affect performance of the light.

Other factors such as weather conditions and the number of hours of daylight will also affect the performance as well.

Turn On and Off

The switch is located near the battery unit. To turn on, simply set to 'ON'. To switch off, just set to 'OFF'.

Maintenance & Troubleshooting

1. Make sure the switch is set to the "ON" position.
2. Keep the solar panel clean.
3. If a solar product does not light up after it has been used for around 8 – 12 months, replace the rechargeable battery as it may be weak or worn out. (Battery 1 pc "AA" 1.2v 400Mah, Ni-MH, Rechargeable). **Never use another battery with a different spec.**

Battery Replacement

1. Unscrew the battery compartment cover by using a Phillips head screwdriver (not included).
2. Open the compartment carefully and ensure that the battery terminals are not damaged.
3. Remove the old depleted battery and replace with 1 x new AA rechargeable battery.
4. Secure the battery compartment in place using the screws.

Attention: Batteries must be recycled or disposed of in accordance with your local authority guidelines. Do not dispose of these near an exposed heat source or open flame or into your normal household waste. Remove the battery from the product if it is to be stored for a long period of time. Removal and/or replacement of the battery should only be carried out by an adult or under adult supervision.

Health & Safety

- Do not use the lights if the insulation or bulb have been damaged.
 - Never allow the product to come into contact with excessive heat or naked flame.
 - This product is not a toy. Keep away from pets and children, ensuring that children are supervised at all times.
 - When disposing of this product, please do so in line with your local authority guidelines.
-

Name	Gardenwize Solar Colour Changing LED Wind Chime
Supplier Code	GW296
LED	0.5W SMD LED
Battery	1.2V AA 600mAh NI-MH
Solar Panel	Crystalline 2V - 80mA
Dimensions	70cm x 13.5cm



Streetwize,

Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:

E: support@streetwize.co.uk

T: +44 (0)161 447 8597

EU Regd. Address:

Ace Supply Co (Europe) Ltd.
D02 A098, Republic of Ireland

www.streetwize.co.uk