



GW498

---

# 15cm Solar Powered Multi-Coloured Crackle Ball

Information for use \_\_\_\_\_

---

Thank you for purchasing this product from Streetwize Garden. The instructions written below provide you with guidance on how to get best use of the product. We highly advise that you read these instructions before using the product.

---

## Before First Use

Remove the protective film from the solar panel.

---

## Charging & Operation

1. The “on/off” switch is situated at the top of the solar panel case. To access the switch, twist the crackle to reveal the solar panel. Here you will find the switch.
2. Set the switch to the “ON” position. Then replace the crackle ball and position the light in a sunny location.
3. Charge the solar product by placing it under direct sunlight for at least 8 hours.
4. The light will come on automatically at night. It will charge under direct sunlight during the day time and illuminate at night.

**NOTE:** In order to test the light simply cover the solar panel with your hand and the light should turn on automatically.

---

## Important

1. Install the solar product in an area where it can get direct sunlight.
  2. Leave the switch to the “ON” position.
  3. Place the solar light in a location that is away from other light sources at night, such as street lights. Artificial lighting may prevent the product from turning on automatically at night.
  4. Duration of solar light illumination depends on the solar product’s level of sunlight exposure, geographical location, weather conditions and the hours of daylight.
- 

## Maintenance & Troubleshooting

1. Make sure the switch is set to “ON”.
2. Keep the solar panel clean.
3. If a solar product does not light up after it has been used for around 8 – 12 months, replace the rechargeable battery as it may be weak or worn out (Battery - new 1.2V AA 600 MAh rechargeable battery). Never use another battery with a different spec.

---

## Battery Replacement

1. Unscrew the battery compartment cover (found at the base) by using a Phillips head screwdriver (not included).
2. Open the compartment carefully and ensure that the battery terminals are not damaged.
3. Remove the old depleted battery and replace it with 1 x new 1.2V AA 600 MAh rechargeable battery.
4. Secure the battery compartment in place using the screws.

**Attention: Batteries must be recycled or disposed of in accordance with your local authority guidelines. Do not dispose of these near an exposed heat source or open flame or into your normal household waste. Remove the battery from the product if it is to be stored for a long period of time. Removal and/or replacement of the battery should only be carried out by an adult or under adult supervision.**

---

## Health & Safety

- Do not use the lights if the insulation or bulb have been damaged.
  - Never allow the product to come into contact with excessive heat or naked flame.
  - This product is not a toy. Keep away from pets and children, ensuring that children are supervised at all times.
  - When disposing of this product, please do so in line with your local authority guidelines.
- 

## Technical Specification

Name	15cm Solar Multi-Coloured Crackle Ball
Supplier Code	GW498
Quantity	1
Dimensions	15cm diameter
Battery	600MAh Ni-MH rechargeable battery



---

**Streetwize:**

Suite GA, Marsland House,  
Marsland Road, Sale, M33 3AQ

**For Product Support:**

**E:** [support@streetwize.co.uk](mailto:support@streetwize.co.uk)

**T:** +44 (0)161 447 8597

**EU Regd. Address:**

Ace Supply Co (Europe) Ltd.  
D02 A098, Republic of Ireland

---

**[www.streetwize.co.uk](http://www.streetwize.co.uk)**

---