

gardenwize

GW688/GW689

# MGO Cylinder Fire Pit

Information for use

## Important safeguards

- This product is for outdoor use only and should not be used in a building, garage or any other enclosed area. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.
- Please bear in mind that this product is only intended to be used as a barbecue grill, not furnace.
- This product is not for commercial use.
- This product should only be used by adults; keep children and pets at a safe distance.
- Do not use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire as a rapid increase in temperature could damage this product. This product is only suitable for use with charcoal, untreated wood or dry logs. Do not use coal.
- Do not use this product until it is completely assembled and all parts are securely fastened and tightened.
- Do not use the product on decking or any other flammable surfaces such as dry grass, wood chips, leaves.
- Always empty this product after use. Leave a thin layer of ash to protect the bottom. Do not remove ashes or charcoal until they are completely and fully extinguished. Do not touch this product until it is completely cooled unless you are wearing heat resistant gloves as it is hot when in use. Do not handle or move this product when in use.
- Do not handle this product through the holes in the body when in use. The holes on the body are used to let the air in and heat out.
- Do not attempt to store this product until all ashes and charcoals are completely extinguished. Do not leave a burning fire unattended. Hot embers may emit while in use.
- Always use a safety tool and heat resistant gloves when adding or moving fuel or to move grill shelf and mesh cover during use because this product will become very hot.
- We recommend limiting each use to 2 hours to avoid damage to the product. Allow the fire pit to cool completely before using it again.
- Do not overload this product with fuel, a few small logs, is sufficient. Do not add additional fuel until the fire burns down. Do keep the fuel away from the wall of the fire bowl and the MGO as the high temperature may damage it.
- Avoid breathing smoke from the fire and avoid getting it into your eyes.
- Always thoroughly inspect this product before use. A slight discolouration of the finish may occur after use.

**SAFETY INFORMATION WARNING! This fire pit will become very hot, do not move it during operation. Do not use indoors!**

**WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!**

**WARNING! Keep children and pets away. Do not use the barbecue in a confined and/ or habitable space E.g., houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality. Do not use this appliance as a furnace.**

## Assembly


1. Place the stand (1) on a permanent flat, level, heat resistant, non flammable surface away from flammable items.

2. Place the fire bowl (2) on the stand (1).

3. Place the grill (3) on the fire bowl (2).

4. Screw the handle ring (5) to the cover (4).

5. Place the cover (4) on the fire bowl (2).

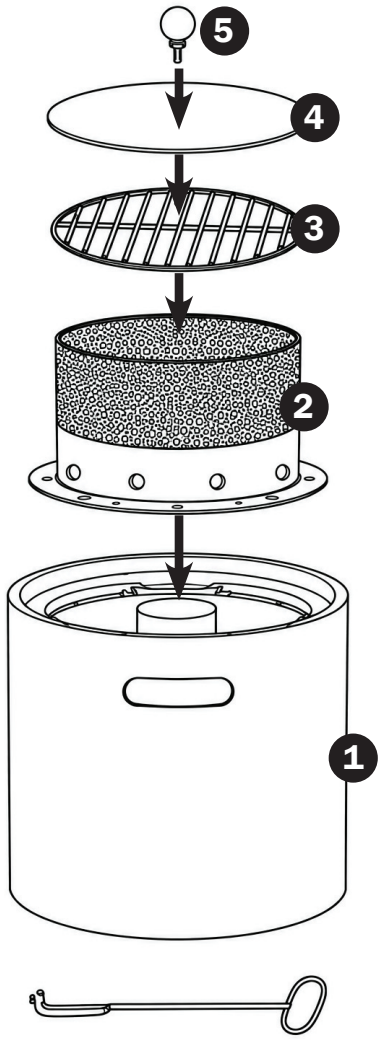


## Lighting a Fire

1. Ensure this product is positioned on a permanently flat, level, heat-resistant, non-flammable surface away from flammable items.
2. Place paper or dry kindling on the log grate or ash in the centre of the fire bowl bottom.
3. Place fuel on the paper or dry kindling. Light the paper or dry kindling to start a fire.
4. Add fuel to this product to increase the heat slowly when embers glow. Do not overload with fuel only 2 small logs is sufficient. When shifting logs, use a safety tool to allow for additional airflow.

## Extinguishing the fire

Stop adding fuel and allow it to die or douse with sand. Do not use water, as this may damage the product.

## Use As A Barbeque

- Heat the barbecue and keep for at least 30mins prior to cooking.
- Before cooking ensure the cooking grill and tools are clean and free of old food residues.
- Add about 0.5kg of charcoal on the log grate or the ash, and light according to the above instructions.
- Place the grill into the firebowl ensuring it is stable.
- Do not cook before the fuel has a coating of ash.
- Ensure all food is cooked thoroughly before eating.
- After cooking do not remove the grill until it has completely cooled.
- After cooking always clean the grill and the tools.

## Care and inspecting

- This product should be inspected on a regular base to ensure product safety and longer product life.
- This product should be cleaned after use. Do not use oven cleaner or abrasive cleaner as they will damage this product.
- When the product has completely cooled down, cover it & store in a dry location.
- The surface of this product will age, discolour, and develop surface rust as soon as it is placed outside and after use. This is normal & does not affect use or the product. To refresh the paint finish. Remove loose paint and rust from the metal with a wire brush when needed and re-paint using a high-temperature paint resistant to at least 600°C. To help reduce surface rust, rub this product with an oily rag after each use.

**UK Regd, Address:**
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

**For Product Support:**
support@streetwize.co.uk

**EU Regd. Address:**
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI

www.gardenwize.uk