

gardenwize

GW733

Round Steel Fire Pit

Information for use


Important Safeguards

- WARNING: For outdoor use only. Do not use inside buildings, garages or any other enclosed area. Toxic carbon monoxide can build up and cause asphyxiation or death.
- This product is not for commercial use.
- This product should only be used by adults; keep children and pets at a safe distance.
- Do not use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire as a rapid increase in temperature could damage this product. This product is only suitable for use with untreated wood or dry logs. Do not use coal.
- Do not use this product until it is completely assembled and all parts are securely fastened and tightened.
- Do not use the product on decking or any other flammable surfaces such as dry grass, wood chips, leaves.
- Always empty this product after use. Do not remove ashes or charcoal until they are completely and fully extinguished. Do not touch this product until it is completely cooled unless you are wearing heat resistant gloves as it is hot when in use. Do not handle or move this product when in use.
- Do not attempt to store this product until all ashes and charcoals are completely extinguished. Do not leave a burning fire unattended. Hot embers may escape during use.
- Always use a safety tool and heat resistant gloves when adding or moving fuel or to move the mesh cover during use because this product will become very hot.
- Do not overload the fire pit with fuel. A few small logs are sufficient. Allow the fire to burn down before adding more fuel.
- Avoid breathing smoke from the fire and avoid getting it into your eyes.
- Always thoroughly inspect this product before use. A slight discolouration of the finish may occur after use.

SAFETY INFORMATION WARNING! This fire pit will become very hot, do not move it during operation. Do not use indoors.

WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3

WARNING! Keep children and pets away. Do not use the fire pit in a confined and/or habitable space E.g., houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality. Do not use this appliance as a furnace.

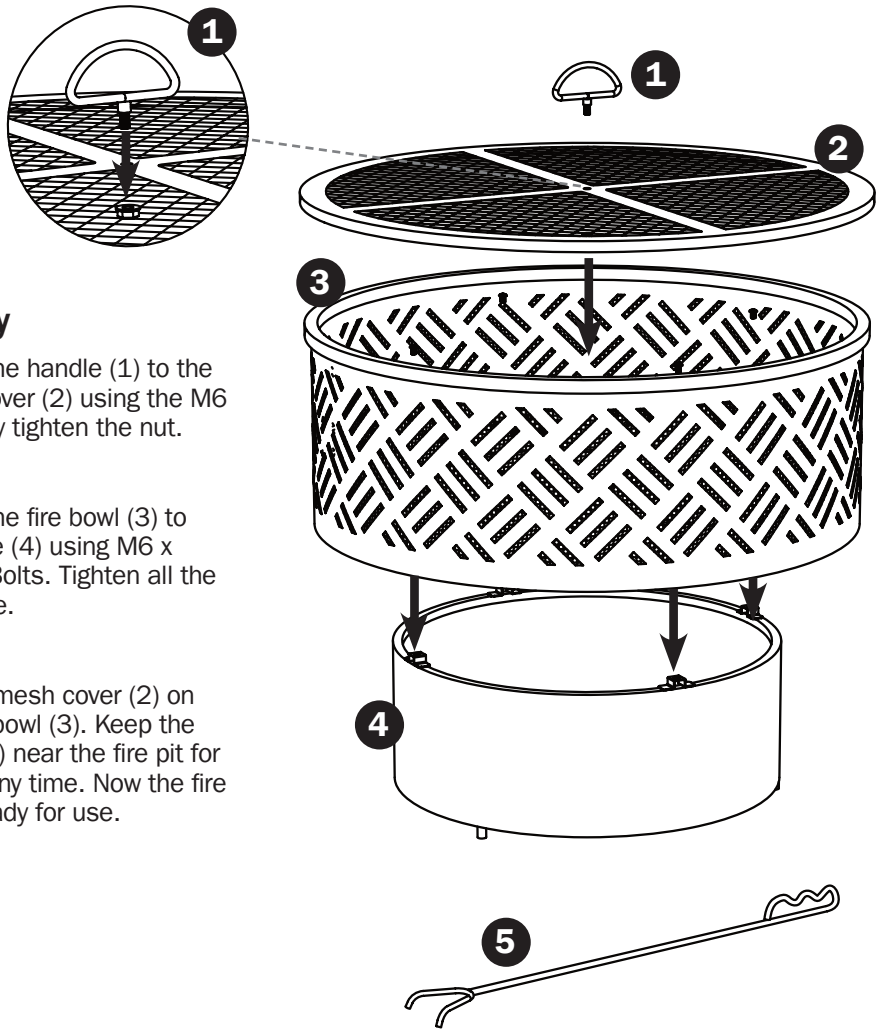

Assembly

1. Attach the handle (1) to the mesh cover (2) using the M6 nut. Fully tighten the nut.

2. Attach the fire bowl (3) to the base (4) using M6 x 10mm Bolts. Tighten all the hardware.

3. Put the mesh cover (2) on the fire bowl (3). Keep the poker (5) near the fire pit for use at any time. Now the fire pit is ready for use.

Lighting a Fire

1. Ensure this product is positioned on a permanently flat, level, heat-resistant, non-flammable surface away from flammable items.
2. Place paper or dry kindling in the centre of the fire bowl bottom.
3. Place fuel on the paper or dry kindling. Light the paper or dry kindling to start a fire.
4. Add fuel to this product to increase the heat slowly when embers glow. Do not overload with fuel. When shifting logs, use a safety tool to allow for additional airflow.

Extinguishing the fire

Stop adding fuel and allow the fire to burn out completely, or extinguish it using sand. Do not use water, as this may damage the fire pit. Allow the fire pit and all ashes to cool completely before emptying or storing.

Care and Maintenance

This product should be inspected on a regular basis to ensure product safety and longer product life.

- This product should be cleaned after use. Do not use oven cleaner or abrasive cleaner as they will damage this product.
- When the product has completely cooled down, cover it & store in a dry location.
- The surface of this product will age, discolour, and develop surface rust as soon as it is placed outside and after use. This is normal & does not affect use or the product.

UK Regd. Address:
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:
support@streetwize.co.uk

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI

www.gardenwize.uk